


SHADOW MOUNT SERIES

Ultra Slim TV Wall Mount

Model: USAM55 Installation Instructions

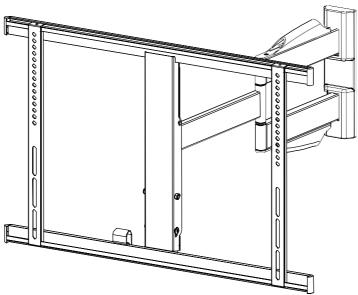

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List on the next page to assure that all components were received and are undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

This product was designed to be used for a specific purpose and configuration. The manufacturer cannot be held liable for damage or injury caused by assembly, installation, or use beyond the intended application.

- Please review these instructions prior to installation. Carefully follow assembly and installation instructions contained herein. Use of proper safety equipment and safe handling techniques during installation will greatly reduce the chance of accident or injury.
- If you do not understand these directions, or have doubts about your ability to safely complete the installation, please contact a qualified contractor.
- Check carefully to make sure there are no missing or defective parts. Never use defective parts.



CAUTION!

This TV mount must be securely attached to the vertical wall. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.


Tools Required	■ 4mm Drill Bit	■8mm Masonry Bit	■ Wrench or Socket Set
	■ Phillips Screwdriver	■ Stud Finder	■ Carpenter's Level

Note: The mounting components and hardware supplied in this package are not designed for installations to walls with steel studs or to cinder block walls. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

Supplied Parts List (2) Monitor Bracket-a (2) Cross Rail-b (1) Wall Plate-c (1) Wall Plate Cover-d (4) Plastic Cover-e (1) Cable Cover 1-f (2) Cable Cover 2-g (4) M4x12 Screw-h (4) M5x12 Screw-i (4) M6x12 Screw-j (4) M8x16 Screw-k (4) M4 Lock Washer-I (4) M5 Lock Washer-m (4) M6 Lock Washer-n (4) M8 Lock Washer-o (4) M8x60 Concrete Anchor-r (4) M6x70 Lag Screw-s (4) M4/M5 Washer-p (8) M6/M8 Washer-q (1) Hex Key-t (1) Bubble Level-u


Mounting the Monitor Brackets to the TV

Check the diameter of the screws needed for your TV by test fitting them into the mounting holes. Make certain the Monitor Brackets (a) are vertically centered and level with each other.

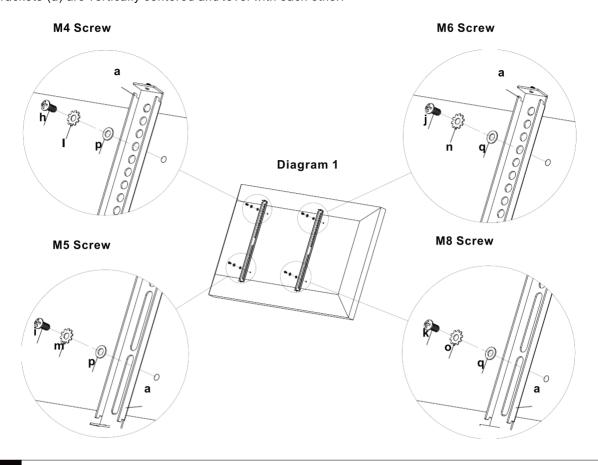


Step 2


Attach the Cross Rails to Monitor Brackets

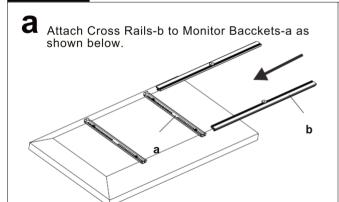



Fasten the four screws as illustrated below to lock the cross rails.

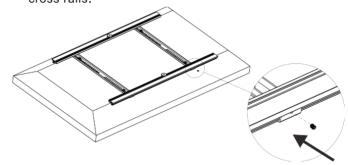

Install Plastic Covers-e onto each end of the Cross Rails-b

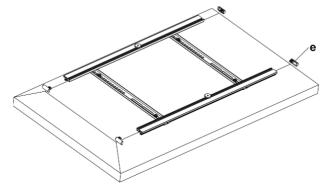


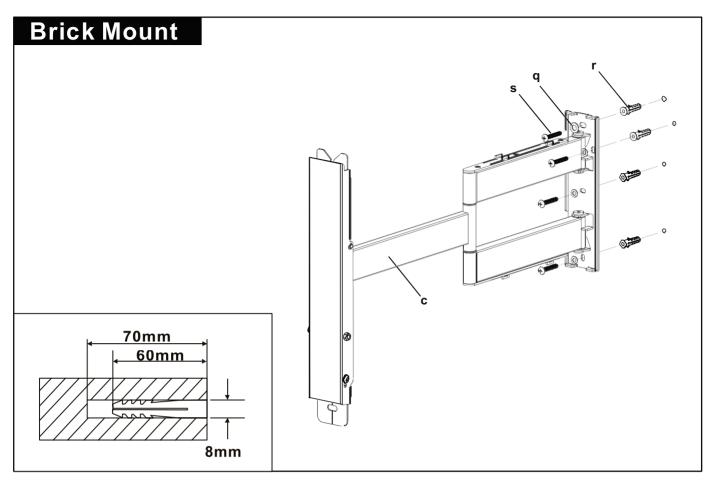

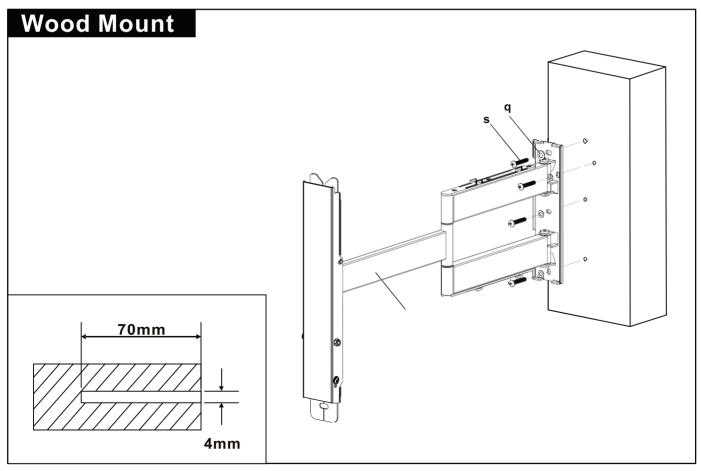


Attach the TV to the Wall Plate


a Loosen the top knurled rail nut and remove the bottom knurled rail nut.

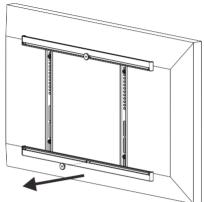

Set the top rail onto the mount as shown below and loosely tighten the knurled rail nut.

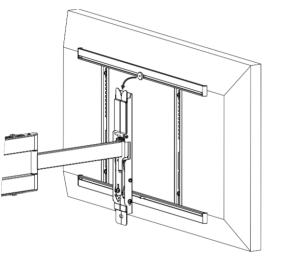


C Install the bottom knurled rail nut, adjust the position of the television, and tighten both rail nuts.

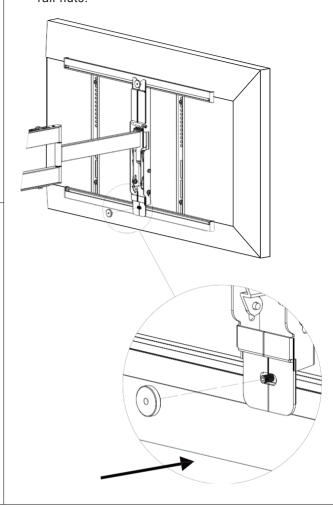


Step 5

Install the Wall Plate Cover

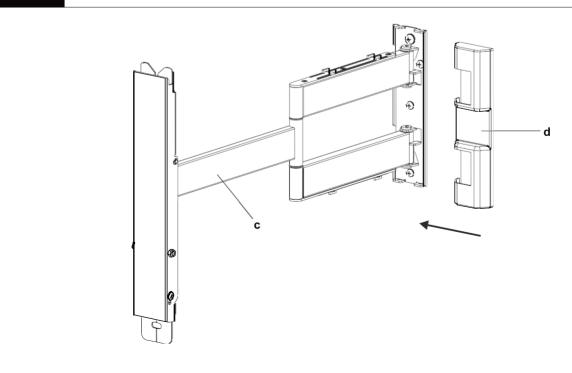


Step 6

Route the Cables and Install the Cable Covers

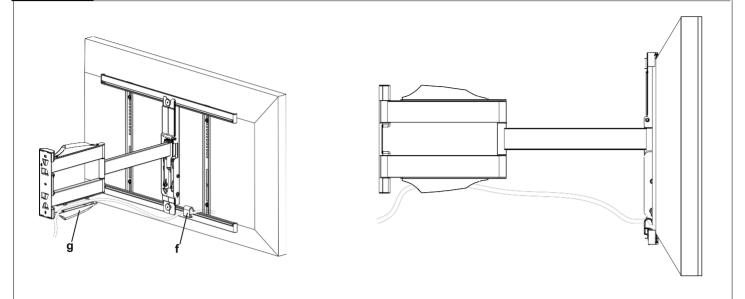

Step 7

Adjust the Tilt Angle of the TV

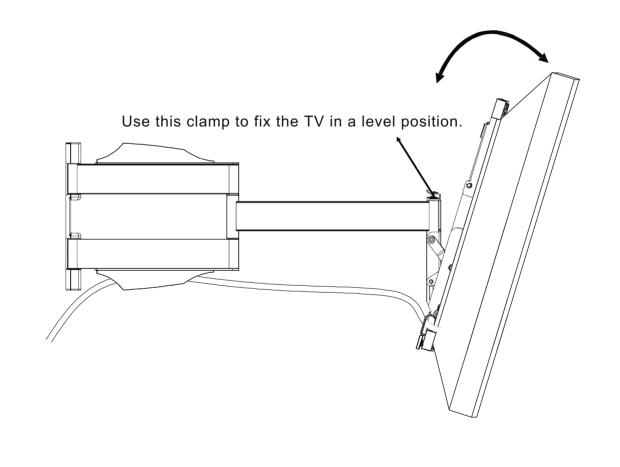

Thank you for choosing Dayton Audio